



WHITE-RODGERS




















COMFORT-SET 90 SERIES

1F93-380 Operating Instructions

Errata Sheet

Information on page 6 of the Operating Instructions, 37-6065A, showing the User Menu is incorrect. This sheet shows the complete User Menu that should appear on pages 5 and 6.

User Menu

Step	Press Button(s)	Displayed (Factory Default)	Press  or  to select:	COMMENTS	Ref Page
1	TIME  and TIME 	0 °F (room temperature)	5 LO to 5 HI	Adjusts temperature display higher or lower.	11
2	TIME 	EMR (ON)	OFF or ON L	Selects EMR option ON or OFF or L ON.	11
3	TIME 	(°F)	°C	Adjusts temperature display to °F or °C.	12
4	TIME 	SET FAN (0)	0 - 6 HRS	Set Fan (one shot) option. Set the duration of a temporary fan option.	12
5	TIME 	BEEP (ON)	OFF	Turns keypad beeper ON or OFF.	12
6	TIME 	HEAT FAST (OFF)	ON	OFF delays starting second stage for economy. ON starts second stage earlier with user intervention.	12
7	TIME 	COOL FAST (OFF)	ON	OFF delays starting second stage for economy. ON starts second stage earlier with user intervention.	12
8	TIME 	TEMP OUT (OFF)	ON	Enables outdoor temperature sensor. Requires optional remote sensor connected to terminal OT and remote thermistor probe. Also displays outdoor temperature if active.	12
9	TIME 	FONE (Icon) (OFF)	ON	Telephone RUN program feature. Requires optional X10 system.	12
10	TIME 	COMP RUN TIME (00)	(Compressor run time in hours)	Shows accumulated time compressor has run. To reset to 00, press  and  .	13
11	TIME 	AUX RUN TIME (00)	(AUXILIARY run time in hours)	Shows accumulated time AUXILIARY has run. To reset to 00, press  and  .	13
12	PROGRAM 			Returns to normal operation.	

1F93-380 TERMINAL CROSS-REFERENCE FOR HEAT PUMP SYSTEMS

SYSTEM AND TERMINAL DESIGNATIONS	COMMON 24 VAC NEUTRAL	HOT 24 VAC HOT	Changeover on call for COOL	Changeover on call for HEAT	FAN INDOOR BLOWER	MALF LIGHT MALFUNCTION INDICATOR	EMER EMERGENCY HEAT	E2/P selectable	1ST STAGE AUX. HEAT	2ND STAGE AUX. HEAT	DAMPER	1ST STAGE PUMP HEAT & COOL	2ND STAGE PUMP HEAT & COOL	NOTES
1F93-380	C	R	O	B	G	L	E		W1	W2	W3 AT	Y1	Y2	NEW THERMOSTAT TERMINALS DISCONNECT JUMPER FROM U AND W2. IF PROVIDED, SET TO HEAT PUMP #3
AMANA	X1	RC-RH			G				W1	W2		Y1		
AMANA PHD-2, -3, -4, OR -5	C	R			G				W	W1				SET TO HEAT PUMP #1
ARCO / Friedrich	C	RC		B	G	L	X2		W2	U		Y		SET TO HEAT PUMP #1
ARCO / Snyder General	C	R	O		G	X	E		W1			Y		SET TO HEAT PUMP #1
BARCO	X	R		B	G	L	E		W2	(W3)		Y1		SET TO HEAT PUMP #1
BARCO PH, WH, MHP, HPQ	X	R		W1	G	L	E		W2	(W3)		Y		SET TO HEAT PUMP #1
B.D.P.	C	R	O		G	F	E		W1	(W2)		Y		SET TO HEAT PUMP #1
B.D.P. 34427DP97	C	R	O		G	L	E		W1	W2		Y		SET TO HEAT PUMP #3
CARRIER	C	R	O		G	L	E					Y	Y1	SET TO HEAT PUMP #2
CARRIER 388Q	C	R	O		G	(L)			W1	W2		Y	Y2	SET TO HEAT PUMP #3
CARRIER 5Q	C	R	O		G	(L)			W1	W2		Y		SET TO HEAT PUMP #3
CARRIER 50YQ, QT382	C	R	O		G	(L)	E		W2			Y		SET TO HEAT PUMP #1
COLEMAN		RED	V		G				W2			Y		SET TO HEAT PUMP #1
COMFORT MAKER H-R811Y594R1375	C	R	O		G		E	X	W1			Y		SET TO HEAT PUMP #1
FEDDERS	C	R			G	L	K		W1	W2		Y		SET TO HEAT PUMP #3
G.E. BAY	B	R	O		G		X2		W			Y		TERMINAL FROM OLD STAT NOT USED - TAPE OFF. SET TO HEAT PUMP #1
G.E. BMV 748A	B	R	O		G				W1	W2		X1		SET TO HEAT PUMP #3
HEATWAVE SHP251	X	R	O		G		E		W2			Y		E2 SWITCH SET TO E2. SET TO HEAT PUMP #1
HEIL-QUAKER	B	R	O		G	(X)			W			Y		JUMPER TERMINALS W1 & E. SET TO HEAT PUMP #1
JANITROL	C	R	O		G		E		W2			Y		SET TO HEAT PUMP #1
LENNOX ALTERNATE HP6	(X)	VVR	R		F				Y					X TERMINAL MAY NOT BE PROVIDED. TERMINAL C MUST BE CONNECTED TO THE COMMON SIDE OF THE TRANSFORMER. SET TO HEAT PUMP #1
LENNOX TYPICAL HP6	(X)	VVR	R		F				Y			M		X TERMINAL MAY NOT BE PROVIDED. TERMINAL C MUST BE CONNECTED TO THE COMMON SIDE OF THE TRANSFORMER. SET TO HEAT PUMP #1
LENNOX HP8	X	VVR	R		F		E		Y			M		SET TO HEAT PUMP #1
LENNOX HP9, 10	X	VVR	R		F	L	E		Y			M		SET TO HEAT PUMP #1
LENNOX HP11	X	VR	R		F		(E)		Y			M	M2	SET TO HEAT PUMP #2
LENNOX HP14	X	VVR	R		F	L	(E)		Y			M	M2	SET TO HEAT PUMP #2
LENNOX HP16, 18, 19	X	VVR	R		F	L	E		Y			M		SET TO HEAT PUMP #1

* See NOTES column for the heat pump configuration menu setting:

- 1 - Single stage compressor.
- 2 - Two compressors or Multi-speed compressor.
- 3 - Separate signals Y1 and W1 for cool and heat.

1F93-380 TERMINAL CROSS-REFERENCE FOR HEAT PUMP SYSTEMS

SYSTEM AND TERMINAL DESIGNATIONS	COMMON 24 VAC NEUTRAL	HOT 24 VAC HOT	Changeover on call for COOL	Changeover on call for HEAT	FAN INDOOR BLOWER	MALF LIGHT MALFUNCTION INDICATOR	EMER EMERGENCY HEAT	E2: CONSTANT ON IN EMER MODE P: CONSTANT OFF IN EMER MODE	1ST STAGE AUX. HEAT	2ND STAGE AUX. HEAT	DAMPER	1ST STAGE PUMP HEAT & COOL	2ND STAGE PUMP HEAT & COOL	NOTES
MAGIC CHEF PB	C	R	O		G	L	E		W1	W2	W3	Y1		SET TO HEAT PUMP #3
MAGIC CHEF PE	C	R	O		G	L	E		W			Y		SET TO HEAT PUMP #1
RHEEM/RUDD	X	R		B	G	L	E		W2	W3		Y		SET TO HEAT PUMP #1
RHEEM/RUDD (PCA)	X	R	O		G	L	E		W2			Y		SET TO HEAT PUMP #1
SINGER	C	R	O		G		E	X	W1			Y		E2 / P SWITCH SET TO E2. SET TO HEAT PUMP #1
R81111594R1375														
SNYDER GENERAL	C	R	O		G		E	X	W1			Y		E2 / P SWITCH SET TO E2. SET TO HEAT PUMP #1
H-R8111Y594R1375														
TRANE TW	B	R	O		G	F	X2		W			Y		ADD 1.5K OHM RESISTOR FROM "E" TO "B" ON UNIT. "T" TERMINAL FROM OLD STAT NOT USED - TAPE OFF. SET TO HEAT PUMP #1
TRANE TYPICAL	B	R	O		G	F	X2		W			Y		T TERMINAL FROM OLD STAT NOT USED - TAPE OFF. SET TO HEAT PUMP #1
WEATHERKING	C	R	Y1		G		E		E			W1		SET TO HEAT PUMP #1
WESCO	C1	R	Y1		G		E		W2			W1		SET TO HEAT PUMP #1
WESCO/Addison	(X)	R	O		G		(E)		W1			Y		X TERMINAL MAY NOT BE PROVIDED. TERMINAL C MUST BE CONNECTED TO THE COMMON SIDE OF THE TRANSFORMER. SET TO HEAT PUMP #1
WESTINGHOUSE	X	R	O		G		E		W1	W2		Y		SET TO HEAT PUMP #3
WESTINGHOUSE H50	X	R	O		G	(L1)	E		W			Y		SET TO HEAT PUMP #1
WESTINGHOUSE HE	(X)	Y		Z	F				H2			C		X TERMINAL MAY NOT BE PROVIDED. TERMINAL C MUST BE CONNECTED TO THE COMMON SIDE OF THE TRANSFORMER. SET TO HEAT PUMP #1
WESTINGHOUSE 2-SPEED	X	R	O	(B)	G	L	W					Y1	Y2	JUMPER W1 TO E. SET HEAT PUMP TO #2
WHITE-RODGERS	C	R	O		G	L	E		W2			Y		SET TO HEAT PUMP #1
WHITE-RODGERS	X1	R	O		G		E		W2			Y		SET TO HEAT PUMP #1
WILLIAMSON	X	R	O		G	L	E		W2	W3		Y		SET TO HEAT PUMP #1
WILLIAMSON	X	R		W1	G	L	E		W2	W3		Y		SET TO HEAT PUMP #1
YORK	B	R	O		G	(X)			W			Y		T TERMINAL FROM OLD STAT NOT USED - TAPE OFF. SET TO HEAT PUMP #1
YORK EBHP	C	R	O		G	(L)	(E)		W2	(W3)		Y		SET TO HEAT PUMP #1
ZONE AIRE	X2	R			G		E		W1	W2		Y1		SET TO HEAT PUMP #3
	X	R		W1	G	L	E		W2	W3		Y		SET TO HEAT PUMP #1

* See NOTES column for the heat pump configuration menu setting:

- 1 - Single stage compressor.
- 2 - Two compressors or Multi-speed compressor.
- 3 - Separate signals Y1 and W1 for cool and heat.

ATTENTION!

This product does not contain mercury. However, this product may replace a unit which contains mercury.

Do not open mercury cells. If a cell becomes damaged, do not touch any spilled mercury. Wearing non-absorbent gloves, take up the spilled mercury with sand or other absorbent material and place into a container which can be sealed. If a cell becomes damaged, the unit should be discarded.

Mercury must not be discarded in household trash. When the unit this product is replacing is to be discarded, place in a suitable container and return to White-Rodgers at 9797 Reavis Road, St. Louis, MO, 63123-5398 for proper disposal.

37-5229A
9302

G	C	L	R	O	B	E	E2	Y1	Y2
G	C	L	R	O	B	E	E2	Y1	Y2
W1	W2	A1	SA	SB	SC	OT	PH		
W1	W2	A1	SA	SB	SC	OT	PH		
+	-	+	-	+	-	+	-		
+	-	+	-	+	-	+	-		
G	C	L	R	O	B	E	E2	Y1	Y2
G	C	L	R	O	B	E	E2	Y1	Y2
W1	W2	W3	SA	SB	SC	OT	PH		
W1	W2	W3	SA	SB	SC	OT	PH		



WHITE-RODGERS

COMFORT-SET 90 SERIES

MULTI-STAGE/HEAT PUMP INSTALLATION/CONFIGURATION

INSTALLATION

DESCRIPTION

This White-Rodgers Automatic Setback Digital Thermostat uses microcomputer technology to provide precise time and temperature control. This thermostat offers

the flexibility to design heating and cooling programs that fit building needs. This thermostat is adaptable to most 24 volt

commercial forced air multi-stage or heat pump systems with electric or fossil fuel auxiliary.

SPECIFICATIONS

1F93-380: 7 Day programming; commercial applications

ELECTRICAL DATA

Electrical Rating:

20 to 30 VAC, 50/60 Hz with common
0.05 to 1.5 Amps per terminal
2.5 Amps maximum total load (all terminals combined)

Standard Systems:

Multi-stage gas, oil, electric.
Single-stage or two-stage compressor heat pump.

THERMAL DATA

Setpoint Temperature Range:

45° to 99°F (7° to 37°C)

Operating Ambient Temperature:

32° to 110°F (0° to 43°C)

Operating Humidity Range:

90% non-condensing max.

Shipping Temperature Range:

-40° to 158°F (-40° to 70°C)

PRECAUTIONS

⚠ WARNING

Do not short out terminals on gas valve or primary control to test. Short or incorrect wiring will damage thermostat and could cause personal injury and/or property damage.

Do not use on circuits exceeding specified voltage. Higher voltage will damage thermostat and could cause shock or fire hazard.

Thermostat installation and all components of the system shall conform to Class II circuits per the NEC code.

⚠ CAUTION

To prevent electrical shock and/or equipment damage, disconnect electric power to system at main fuse or circuit breaker box until installation is complete.

NOTE

Read all instructions thoroughly before beginning installation.

This thermostat is intended for use with a low voltage system. Do not use on a line voltage system.

Do not exceed ratings shown in the Specifications section, above. If in doubt about the electrical ratings of your heating/cooling system, have it inspected by a qualified heating and air conditioning contractor or licensed electrician.

All wiring must conform to local and national electrical codes and ordinances.

This control is a precision instrument, and should be handled carefully. Rough handling or distorting components could cause the control to malfunction.

INSTALLATION

REMOVE OLD THERMOSTAT

Shut off electricity at main fuse or circuit breaker box until installation is complete. AND the new thermostat is configured properly.

Remove the front cover of the old thermostat. With wires still attached, remove wall plate from the wall.

Identify each wire attached to the thermostat using one of the labels enclosed with the new thermostat.

Disconnect the wires from the old thermostat one at a time. **DO NOT** let the wires fall back into the wall.

Install the new thermostat using the following procedures.

ATTACH BASE TO WALL

Remove packing material from the thermostat. Place fingers of one hand on the center top and bottom portion of the thermostat. Grasp the base in the other hand on top and bottom center and gently pull straight out. Forcing or prying on the thermostat will cause damage to the unit.

(Continued on page 2)

INSTALLATION (cont'd)

Place the base over the hole in the wall where the wires come out and mark mounting hole locations using the base as a template. Drill $\frac{3}{16}$ " pilot holes, and install screw anchors in the wall.

Run wires through hole in base and attach base to wall (see fig. 1).

Insert the wires into the terminals on the base using the appropriate wiring diagram and tighten the terminal screws.

- 1 Mounting screws
- 2 Pull wires through this opening
- 3 Insert wires into terminal holes, then tighten screws
- 4 Screw anchors

CONFIGURING AND PROGRAMMING

Before the power is turned on, the thermostat must be configured to operate properly with the system. See the CONFIGURATION section of this manual.

This thermostat can be programmed for automatic temperature control. Refer to Operating Instructions for programming.

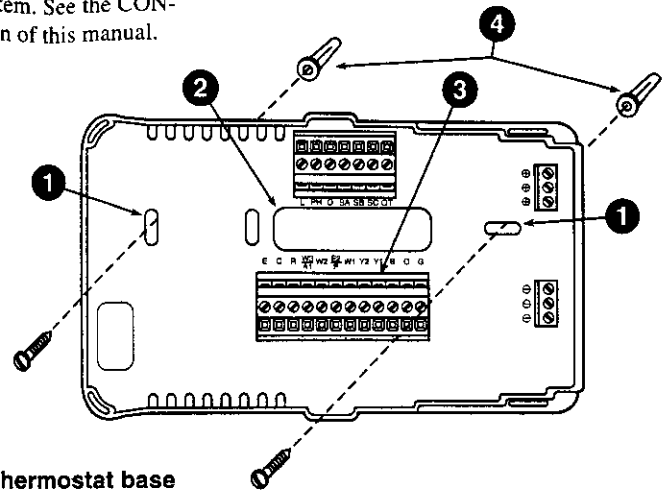


Figure 1. Thermostat base

THERMOSTAT WIRING DIAGRAM

Wiring diagrams are for typical systems only. Refer to equipment manufacturers' instructions for specific system wiring information.

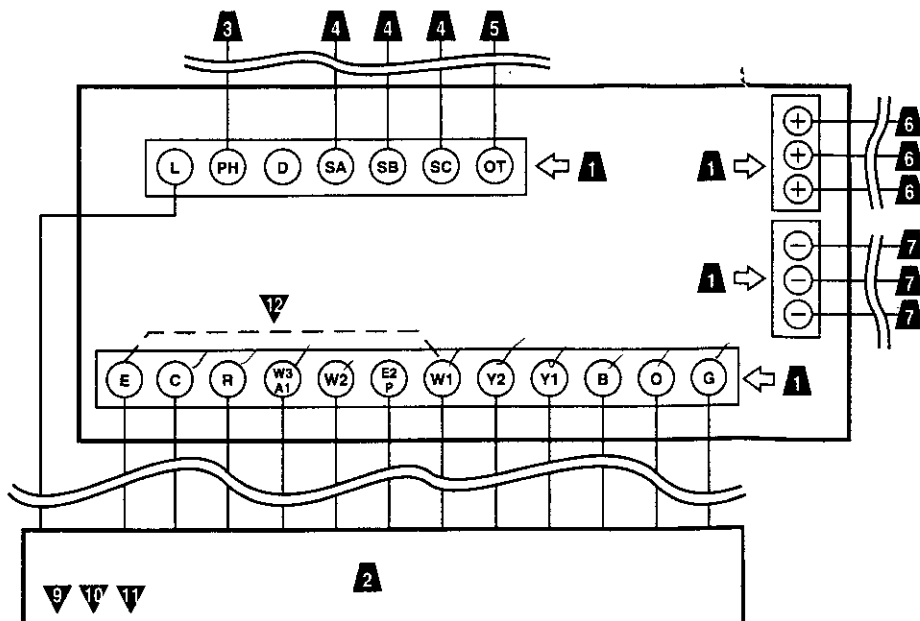


Figure 2. Typical wiring diagram for multi-stage system

LEGEND

- 1 Thermostat terminals
- 2 Heat/cool system
- 3 Optional X-10 Universal Low Voltage Module
- 4 Optional remote indoor sensor signal
- 5 Optional remote outdoor sensor signal
- 6 Remote sensors voltage connection
- 7 Remote sensors common connection
- 8 Optional X-10 Telephone Responder

NOTES

- 9 (Two-transformer systems) Cut and tape off one transformer.
- 10 (Two-transformer systems) If transformer safety circuits are in only one of the systems, remove the transformer of the system with NO safety circuits. If required, replace remaining transformer with a 75VA Class II transformer.

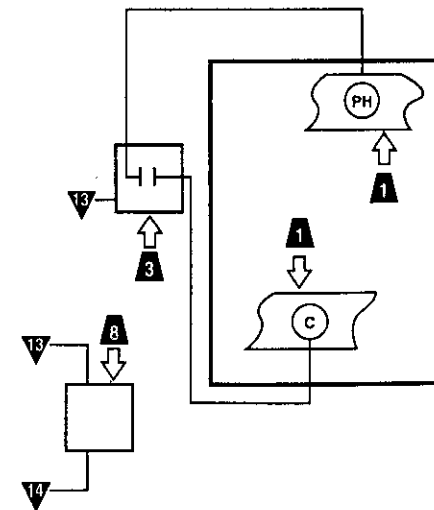


Figure 3. Typical wiring diagram optional X-10 Telephone connection (see page 7 for details)

- 11 (Two-transformer systems) After disconnecting one transformer, the two commons must be jumpered together.
- 12 (Heat pump only) Field installed jumper energize Aux heating in Emergency mode. (See Heat Pump Terminal Outputs)
- 13 To 115 VAC power source.
- 14 To telephone line.

MULTI-STAGE TERMINAL OUTPUTS

Wiring diagrams are for typical systems only. Refer to equipment manufacturers' instructions for specific system wiring information.

You can configure the thermostat for use with either multi-stage electric heat systems or multi-stage gas systems. When configured for electric heat, the **G** terminal (blower/fan)

will be energized on a call for heat. After wiring, see **CONFIGURATION** section for proper thermostat configuration.

TERMINAL OUTPUTS

- (E) No function
- (C) 24 Volts (common)
- (R) 24 Volts (hot)
- (W1) Energized in occupied mode
- (W2) Second call for heat
- (P) No function unless switched to **P** (then energized constantly)

- (W1) First call for heat
- (Y2) Second call for cool
- (Y1) First call for cool
- (B) Energized in heat, off
- (O) Energized in cool
- (G) Blower/fan (energized on call for heat only if thermostat is configured for multi-stage electric heat)

- (L) Malfunction light
- (PH) To optional X-10 Universal Low Voltage Module
- (D) Not used
- (SA) Remote sensor A input
- (SB) Remote sensor B input
- (SC) Remote sensor C input
- (OT) Outdoor sensor input

HEAT PUMP TERMINAL OUTPUTS

Wiring diagrams are for typical systems only. Refer to equipment manufacturers' instructions for specific system wiring information.

You can configure the thermostat for use with the following heat pump system types:

HEAT PUMP TYPE 1. Single-stage compressor system; gas or electric backup.

HEAT PUMP TYPE 2. Multi-stage or two-compressor system; gas or electric backup.

HEAT PUMP TYPE 3. System requiring separate signals for heat (**W1**, **W2**) and cool (**Y1**); gas or electric backup.

Use the terminal output information below to help you wire the thermostat properly for your heat pump system type. After wiring, see **CONFIGURATION** section for proper thermostat configuration.

TERMINAL OUTPUTS

This list shows the terminals that have the same output regardless of thermostat system configuration. The table below shows terminal outputs that vary according to thermostat system configuration.

- (E) First call for heat in emergency mode (See table)
- (C) 24 Volts (common)
- (R) 24 Volts (hot)
- (W1) Energized in occupied mode

- (W2) See Table
- (P) Terminal is energized constantly in emergency mode **unless** switched to **P**; then energized constantly **except** in emergency mode.
- (W1) See Table
- (Y2) See Table
- (Y1) See Table
- (B) Energized in heat, off, emer
- (O) Energized in cool

- (G) Blower/fan energized on call for heat
- (L) Malfunction light
- (PH) To optional X-10 Universal Low Voltage-Module
- (D) Not used
- (SA) Remote sensor A input
- (SB) Remote sensor B input
- (SC) Remote sensor C input
- (OT) Outdoor sensor input

Terminal Designation	Heat Pump Type 1 Terminal Output	Heat Pump Type 2 Terminal Output	Heat Pump Type 3 Terminal Output
(W1)	Aux Heat 1 (2nd stage)	Aux Heat (1st stage aux.)	1st call for heat
(W2)	Aux Heat 2 (3rd stage)/2nd stage in emergency mode	2nd stage in emergency mode	2nd call for heat; 2nd stage in emergency mode
(Y1)	1st call for cool/heat	1st call for cool/heat	1st call for cool
(Y2)	2nd call for cool	2nd call for cool/heat	No output
	If system does not provide connection to (E), jumper (W1) to (E)		If system does not provide connection to (E), jumper (W2) to (E)

CONFIGURATION


SWITCHES

RESET SWITCH

See the **Troubleshooting** section at the end of this document for more information about the function of this switch.

E2/P SWITCH

The **E2/P** switch is located on the back of the thermostat body (see fig. 4). This switch controls how the **E2/P** terminal of the thermostat will be energized. When the switch is in the **E2** position (down), the **E2/P** terminal will be energized on a call for emergency heat. When the switch is in the **P** position (up), the **E2/P** terminal will always be energized **except** on a call for emergency heat. Consult the equipment manufacturer or a qualified heating/cooling service person before setting this switch. If your system has no connection to **E2/P**, no change in the switch setting is required.

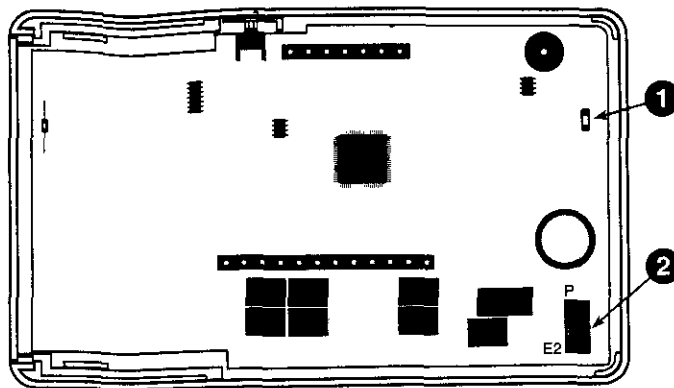

- 1 Reset switch
- 2 E2/P switch

Figure 4. Switch locations on back of thermostat body

INSTALLER CONFIGURATION

BEFORE TURNING POWER ON, please read the following instructions. Before operating the system, you must configure the thermostat to operate properly with your equipment.

The thermostat, as it comes from the factory, is configured to operate a **standard multi-stage electric forced hot air system with a single stage air conditioning compressor and fan**. In this configuration, the thermostat will turn on the fan immediately on a call for heat. If you are unsure whether your system requires the thermostat to control the fan, contact your furnace/air conditioning system manufacturer or a qualified heating/air conditioning service person.

Your new thermostat has an **Installer menu**, which allows you to customize the thermostat to meet your requirements.

(The thermostat also has a **User menu** and a **Keypad Lockout menu**; these menus are explained further in the Operating Instructions.)

The menu settings can be changed at any time to meet system or personal requirements.

After properly wiring the thermostat, turn on power to the system. Press **PROGRAM** **RUN** to make certain the thermostat is in the run program mode, then press **TIME** **FWD** and **TIME** **BACK** at the same time to enter the User Configuration menu. Then press **and hold SET** **TIME** and **SET** **DAY** for approximately 3 seconds to enter the

Installer menu. The display will change to show the first item on the Installer menu (multi-stage/heat pump selection). Use the following text, along with the **Installer table** on page 6, to guide you through the menu.

Once in the menu, you set each item to the proper selection using **▲** or **▼**, then press **TIME** **FWD** to change the display to the next step. To return to a previous item, press **TIME** **BACK**.

To exit the menu at any time, press **PROGRAM** **RUN**. To reenter the menu at any time from the run program mode, press **TIME** **FWD** and **TIME** **BACK** at the same time, then press **and hold SET** **TIME** and **SET** **DAY** for approximately 3 seconds.

MULTI-STAGE/HEAT PUMP MODE.

(Installer table step 1.) Use this item to select the system type (multi-stage or heat pump).

IF YOU HAVE A HEAT PUMP SYSTEM, you must select **HEAT PUMP** here. This sets up proper default values for most heat pump systems. This selection also makes available some additional menu items that apply only to heat pump systems.

HEAT PUMP COMPRESSOR CONFIGURATION.

(Installer table step 2; this menu item is displayed only when heat pump was selected in step 1.) Use this item to select the number of heat pump compressors and how they are connected.

ELECTRIC HEAT FAN CONFIGURATION.

(Installer table step 3.) This menu item determines whether fan control will be through the thermostat or through the heating system. If you have an electric heat or other system that **REQUIRES** the thermostat to control the fan, set this item **ON**. This allows the thermostat to energize the fan immediately on a call for heat. If you are unsure if the system requires the thermostat to control the fan, contact the equipment manufacturer or a qualified heating and air conditioning service person. If your system controls fan operation (as with most fossil fuel systems), set this item to **OFF**. Note that with heat pump systems, the fan always cycles with the compressor.

ADJUSTABLE ANTICIPATION.






















(Installer table steps 4 through 6; step 6 is for heat pump only). These items allow the cycle times in heating, cooling and auxiliary (heat pump systems only) to be increased or decreased. The factory set values can be adjusted higher for longer cycles or lower for shorter cycles.

NOTE: Some manufacturers still instruct you to set the anticipator to the current draw of the equipment. That instruction applies only to mercury bulb or mechanical thermostats; it *does not apply to this digital thermostat*. As configured at the factory, this thermostat will

(Continued on page 6)

INSTALLER TABLE

NOTE: You must be in the User Configuration Menu to enter the Installer Menu.

Step	Press Button(s)	Displayed (Factory Default)	Press  or  to select:	COMMENTS	See Page
1	SET  and SET  (hold for two seconds)	MLTI STG	HEAT PUMP	Selects type of system. Selecting HEAT PUMP makes additional menu items for heat pump system available.	4
2	TIME  (Heat Pump ONLY)	HEAT PUMP (1)	2 OR 3	Selects: 1. one compressor on Y1. 2. two compressors on Y1, Y2. 3. one compressor on W1.	4
3	TIME 	ELECT HEAT FAN (ON)	OFF	Fan cycles with call for heat if ON. Fan always cycles with pump stages.	4
4	TIME 	SET CYCLE HEAT (5 for multi-stage 13 for heat pump)	1 to 40 for multi-stage 9 to 40 for heat pump	Selects HEAT anticipation adjustment.	4
5	TIME 	SET CYCLE COOL (12)	9 to 40	Selects COOL anticipation adjustment.	4
6	TIME  (Heat Pump ONLY)	SET CYCLE AUX (6)	1 to 40	Selects AUXILIARY stage anticipation adjustment. (Heat Pump ONLY)	4
7	TIME 	COOL FAN DELAY OFF (1)	1 to 127 seconds	Selects time delay for COOL fan OFF.	6
8	TIME 	FAN DELAY ON (1)	1 to 30 seconds	Selects time delay for fan ON. Applies only to compressor stages for heat pump or COOL.	6
9	TIME 	HEAT FAN DELAY OFF (0)	1 to 30 seconds	Selects time delay for HEAT fan OFF.	6
10	TIME  (Heat Pump ONLY)	PUMP (ON)	OFF	Fossil Fuel Kit Alternative option. Turns compressor OFF if Auxiliary is ON for longer than one minute. See Configuration Section. (Heat Pump ONLY)	6
11	TIME 	COMP LOCK (OFF)	ON	Selects compressor short-cycle protection enabled or OFF.* See Configuration Section.	6
12	TIME 	ECON (OFF)	ON	Economizer option. Long Y1 cycles for cooling with outdoor air	6
13	TIME 	HEAT-OFF-COOL-AUTO or HEAT-EMER-OFF-COOL-AUTO (for heat pumps)	HEAT-OFF-COOL or HEAT-EMER-OFF-COOL (for heat pumps)	Allows selection of HEAT and COOL or HEAT, COOL and AUTO with SYSTEM button. (EMER appears in sequence after HEAT if HEAT PUMP is selected.)	6
14	TIME 	REM SENS A (OFF)	ON	Selects Remote Sensor A (connected to SA) if ON. Also displays temperature when ON.	7
15	TIME 	REM SENS B (OFF)	ON	Selects Remote Sensor B (connected to SB) if ON. Also displays temperature when ON.	7
16	TIME 	REM SENS C (OFF)	ON	Selects Remote Sensor C (connected to SC) if ON. Also displays temperature when ON.	7
17	TIME 	STAT SENS L (ON)	OFF	When OFF, disables local sensor if a remote sensor is enabled. Also displays temperature when ON	7
	PROGRAM 			Returns to normal operation	

* NOTE: COMP LOCK OFF permanently defeats compressor lockout. **You must turn this selection ON if you do not have a system that already provides compressor short-cycle protection.** Please see "Lockout Bypass Option" to temporarily override compressor lockout.

maintain an accurate temperature. No further adjustment is necessary, although you can use these menu items to customize the performance of the thermostat to your requirements.

The adjustment range for HEATING is from 1 to 40 (9 to 40 for heat pump). The factory preset is 5 (13 for heat pump). The adjustment range for COOLING is from 9 to 40. The factory preset is 12 (13 for heat pump). The cooling will not go below 9 because compressors require a longer cycle. The adjustment range for AUXILIARY (heat pump only) is from 1 to 40. The factory preset is 6.

The chart below shows how this adjustment range affects thermostat performance.

PROGRAMMABLE COOL FAN-OFF AND FAN-ON DELAY.

(Installer table steps 7 and 8.) These items allow a selection of 1 to 127 seconds of fan-off delay after the thermostat has satisfied the call for cool, or a fan-on delay of 1 to 30 seconds on a call for cool (or heat pump compressor activation).

The fan-off delay allows the fan to continue running after the compressor has shut off. This distributes the cool air that would otherwise stay trapped in the air conditioning coils through the ducts. Ideally the timing would be set so the fan shuts off just as the cool air is exhausted. If this timing is set *too* long the fan may begin blowing warm air before it shuts off. Shortening the fan-off delay will prevent this.

A short delay to allow the A-coil to cool off before the fan turns on may be preferred. This also allows the compressor and the fan to come on at slightly different times, which allows full power to the compressor on start up.

PROGRAMMABLE HEAT FAN-OFF DELAY.

(Installer table step 9.) This item allows a selection of 1 to 30 seconds of fan-off delay after the thermostat has satisfied the call for heat.

The fan-off delay allows the fan to continue running after the burner, heating element, etc. has shut off. This distributes the heat that

would otherwise stay trapped in the ducts. Ideally the timing would be set so the fan shuts off just as the warm air is exhausted. If this timing is set *too* long the fan may begin blowing cool air before it shuts off. Shortening the fan-off delay will prevent this.

FOSSIL FUEL KIT ALTERNATIVE.

(Installer table step 10; heat pump only) This item controls heat pump compressor operation with a fossil fuel auxiliary. This menu item may eliminate the need for a separate fossil fuel kit, although we recommend that you consult the heat pump system manufacturer before using this feature instead of a kit. This item will allow the thermostat to turn the heat pump compressor off if the auxiliary is on for more than one minute, to prevent compressor head pressure from getting too high. To use this feature instead of a kit, select PUMP OFF.

COMPRESSOR LOCKOUT.

(Installer table step 11) This thermostat is capable of protecting the system against premature compressor failure by "locking out" the compressor for at least five minutes after each cycle. When the thermostat is in compressor lockout, the word COOL will flash on the display. With heat pump systems, the word HEAT will flash if the lockout occurs during a heat cycle. During this period, the compressor will not be energized.

If the system has short-cycle protection, this item should not need to be enabled. However, if your system does not have short-cycle protection, turn **COMP LOCK ON**. This will protect the compressor from short-cycling and potential premature compressor failure.

Note that **COMP LOCK OFF** permanently disables compressor lockout. If you need to temporarily disable compressor lockout, please see **Lockout Bypass Option**.

Lockout Bypass Option

FOR QUALIFIED SERVICE TECHNICIANS' USE ONLY.
HOMEOWNERS SHOULD NOT USE THIS FEATURE DUE TO POSSIBILITY OF EQUIPMENT OR PROPERTY DAMAGE, OR PERSONAL INJURY.

COMPRESSOR SHORT TERM CYCLE PROTECTION

If this thermostat has been configured to provide short-cycle protection, during the 5-minute lockout period the thermostat will lock out the compressor to allow head pressure to stabilize. To override this feature for one cycle while testing thermostat operation, press **SET** **TIME** and **SET** **DAY** buttons at the same time.

ECONOMIZER FEATURE.

(Installer table step 12) This item allows longer Y1 cycles for cooling with outdoor air.

DISABLING AUTO (Automatic Changeover) MODE.

(Installer table step 13) This thermostat, as configured at the factory, provides automatic changeover, which allows the thermostat to switch between heating and cooling to maintain temperature. In this configuration, when you press the SYSTEM button, the thermostat will go through HEAT-OFF-COOL-AUTO modes (HEAT-EMER-OFF-COOL-AUTO for heat pumps). Select HEAT(-EMER)-OFF-COOL to disable the automatic changeover feature.

OPTIONAL REMOTE TEMPERATURE SENSE.

(Installer table steps 14 through 16) Up to three remote sensors (part # F145-1328) can be attached to this thermostat to sense indoor temperature at locations away from the thermostat. Each sensor may be located as far as 200 feet away from the thermostat. This is an excellent feature if the thermostat is in a poor location for sensing temperature or if you want to install the thermostat in a

(Continued on page 7)

Anticipation Value	HEATING		COOLING	
	Cycle Length	Differential Temperature	Cycle Length	Differential Temperature
1-8	Shorter	0.4-0.6°F (0.2-0.3°C)	N/A	N/A
9-20	Longer	0.6-1.0°F (0.3-0.6°C)	Shorter	0.6-1.0°F (0.3-0.6°C)
21-40	Hydronic	1.0-1.6°F (0.6-0.9°C)	Longer	1.0-1.6°F (0.6-0.9°C)

These numbers are approximate and represent operation with a typical system. Actual temperature differentials and run times may vary widely based on your building and equipment, as well as outdoor temperature conditions.


separate room to prevent tampering. (Refer to the installation instructions included with the remote sensor for proper installation and wiring.) After installing and connecting the remote sensor(s) to the thermostat, use these menu items to enable each remote indoor temperature sensor (A, B, and/or C). If a sensor location (A, B, C) is set to ON and there is a functioning remote sensor attached, the sensed temperature at that location will be displayed. Note that if SENSOR A, B or C are set to ON in the menu, but no sensor is installed, or if the sensor is not functioning, when you exit the menu, **CHECK STAT SYSTEM** will be displayed. To correct this, check for proper remote sensor installation and wiring. If necessary, return to the menu and be sure that the remote sensor items are set correctly.

(Installer table step 17). If you wish to sense indoor temperature using **ONLY** the remote sensor(s), use this menu item to disable the temperature sensor in the thermostat (designated as the **Local** sensor).

When operating with remote sensor(s), the thermostat will calculate an average of the sensed temperatures in all enabled sensor locations (A, B, C and/or L), then display the average temperature as the room temperature. During programming, you can also assign each enabled sensor different priorities during different program periods. This allows the system to maintain a comfortable environment by giving higher priority to occupied locations. At the same time, efficient system operation is enhanced by giving lower priority to unoccupied locations. For detailed instructions on this feature, see the Operating Instructions.

OUTDOOR TEMPERATURE SENSE.

This thermostat can also display outdoor temperature, if you install an outdoor remote sensor with an outdoor temperature sensor probe (F145-1378). Refer to the remote sensor installation instructions for proper installation and wiring; refer to the Operating Instructions to enable this feature and display outdoor temperature on the thermostat.

After using the **Installer** menu to properly configure the thermostat for your system, press **PROGRAM** .

OPTIONAL ACTIVATE RUN PRG BY TELEPHONE




With the optional X-10 Telephone Responder (Model TR551, Radio Shack catalog RSU# 10037778) and Universal Low Voltage Module (UM506, Radio Shack catalog RSU# 10037752) installed, you can make a telephone call to run your program if the thermostat has been set to Hold or Vacation Hold. Figure 3 shows typical wiring connections for installing the X-10 equipment. The switch on the Universal Low Voltage module must be set to the "Momentary" position.

This option must be enabled on the User menu (see Operating Instructions).





CHECK THERMOSTAT OPERATION

FAN OPERATION

If your system **does not** have a G terminal connection, skip to "Heating System" section.

1. Turn power on to the system.
2. Press **PROGRAM** .
3. Press  until **FAN ON** is displayed. The fan should begin to operate.
4. Press  until **FAN AUTO** is displayed. The fan should stop operating.





HEATING SYSTEM

1. Press **PROGRAM** .
2. Press  until **HEAT** is displayed. If the heating system has a standing pilot, ensure that it is lit.
3. Press  to adjust thermostat setting above room temperature. The heating system should begin to operate.
4. Press  to adjust temperature below room temperature. The heating system should stop operating.

COOLING SYSTEM


CAUTION


To prevent compressor and/or property damage, if the outdoor temperature is below 50°F (10°C), DO NOT operate the cooling system.


1. Press **PROGRAM** .
2. Press  until **COOL** is displayed.
3. Press  to adjust thermostat setting below room temperature. The fan should come on (after the fan-on delay time, if any), followed by cold air circulation.
4. Press  to adjust temperature setting above room temperature. The cooling system should stop operating, and the fan should stop running (after the fan-off delay time, if any).

MULTI-STAGE/HEAT PUMP AUXILIARY OPERATION TEST

Follow these steps to energize all stages of heat or cool to permit system checks during installation.

HEAT: Press  to raise temperature setting to 99°F, then hold for five seconds. The second and third stage heat relays will energize immediately for test purposes. The LED indicator will glow green for first stage and yellow for second stage.

COOL: Press  to lower temperature setting to 45°F, then hold for five seconds. The second stage cool relay will energize immediately for test purposes. The LED indicator will glow green for first stage and yellow for second stage.

EMERGENCY (heat pump only): Press  to select **EMER** mode. The LED indicator will glow red for emergency mode. A flashing light indicates a malfunction in the system.





TROUBLESHOOTING

RESET BUTTON

If the thermostat does not respond when keys are pressed, or the thermostat is not operating properly, you may use the reset button located on the back of the thermostat body (see fig. 4). Thermostat programming and configuration will **not** be affected by pressing the reset button. However, the clock will need to be reset.

RESETTING THERMOSTAT CONFIGURATION AND PROGRAMMING

The thermostat can be reset back to default programs and configuration. Removing power from the thermostat **will not** reset it, because the default settings are maintained in permanent memory. **Before resetting the thermostat**, you may want to make note of the previously selected configuration and programming. **You must reconfigure and reprogram the thermostat after resetting it using this method.**

To reset the thermostat, press and release **PROGRAM** , then press the **FAN** , **TIME**  and  buttons at the same time. This will reset the thermostat to factory default programs and configuration. The display will momentarily go blank, then all segments on the display will momentarily be shown. The thermostat will then go into the **HOLD** mode and will maintain factory preset temperatures.



WHITE-RODGERS DIVISION
EMERSON ELECTRIC CO.
9797 REAVIS ROAD
ST. LOUIS, MISSOURI 63123-5398
www.white-roddgers.com

