

---

# SUPPLEMENTAL INSTRUCTIONS

---

## REWC32-\* & REWC53-\* Wall Curbs

---

### Installation



## WARNING

*For use on noncombustible walls only.  
Do not install on combustible walls.  
Installation on combustible walls can result in fire.*

Hardware Included	
Qty.	Description
10	1" Bolts
48	Screws
20	Washers
10	Lock Nuts

1. Assemble REWC32-\* wall curb per Figure 1 (page 2) or REWC53-\* wall curb per Figure 2 (page 3).
2. Attach curb to wall first. The back flanges for attaching to the building wall are formed so they will line up with the mounting pattern of original 3-ton Bard units, and that the weight will bear on the wall's original structural design. Fasteners for attaching the curb to the wall are not included in the kit. Use fasteners sufficient for the wall structure such as 5/16" lag/anchor bolts; use 7/8" diameter flat washers on the lag bolts.

When installing the curb, the mounting hole pattern must be kept as centered as reasonably possible over the supply and return air openings in the wall. See Figure 3 (REWC32-\*) on page 4 or Figure 4 (REWC53-\*) on page 5. Caulk the flanges of the wall curb where they meet the structure.

3. Remove supply flange from unit back prior to installing unit to curb. See Figure 5 on page 6.
4. Lift unit into position and support while the supplied bolts, washers and lock nuts are installed fastening the unit to the curb. **Do not hang unit from front lip of curb unsupported. Unit must be held in place when installing the supplied bolts, washers and nuts to attach unit to curb.** See Figure 6 on page 7. (Skid may remain attached to unit while securing unit to curb for improved stability. Remove skid after unit has been fastened to curb.)
5. Caulk the top of the unit where it meets the wall curb as shown in Figure 7 on page 8.
6. Existing supply and return grilles should be discarded and replaced with either RGR-2W and SGR-2W (2 ton) or RGR-3W and SGR-3W (3 ton). See page 9 for instructions on preparing the SGR-2W or SGR-3W supply air grille for installation.




Climate Control Solutions

Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
www.bardhvac.com

Manual: 7960-799B  
Supersedes: 7960-799A  
Date: 7-7-23


FIGURE 1  
REWC32-\* Wall Curb

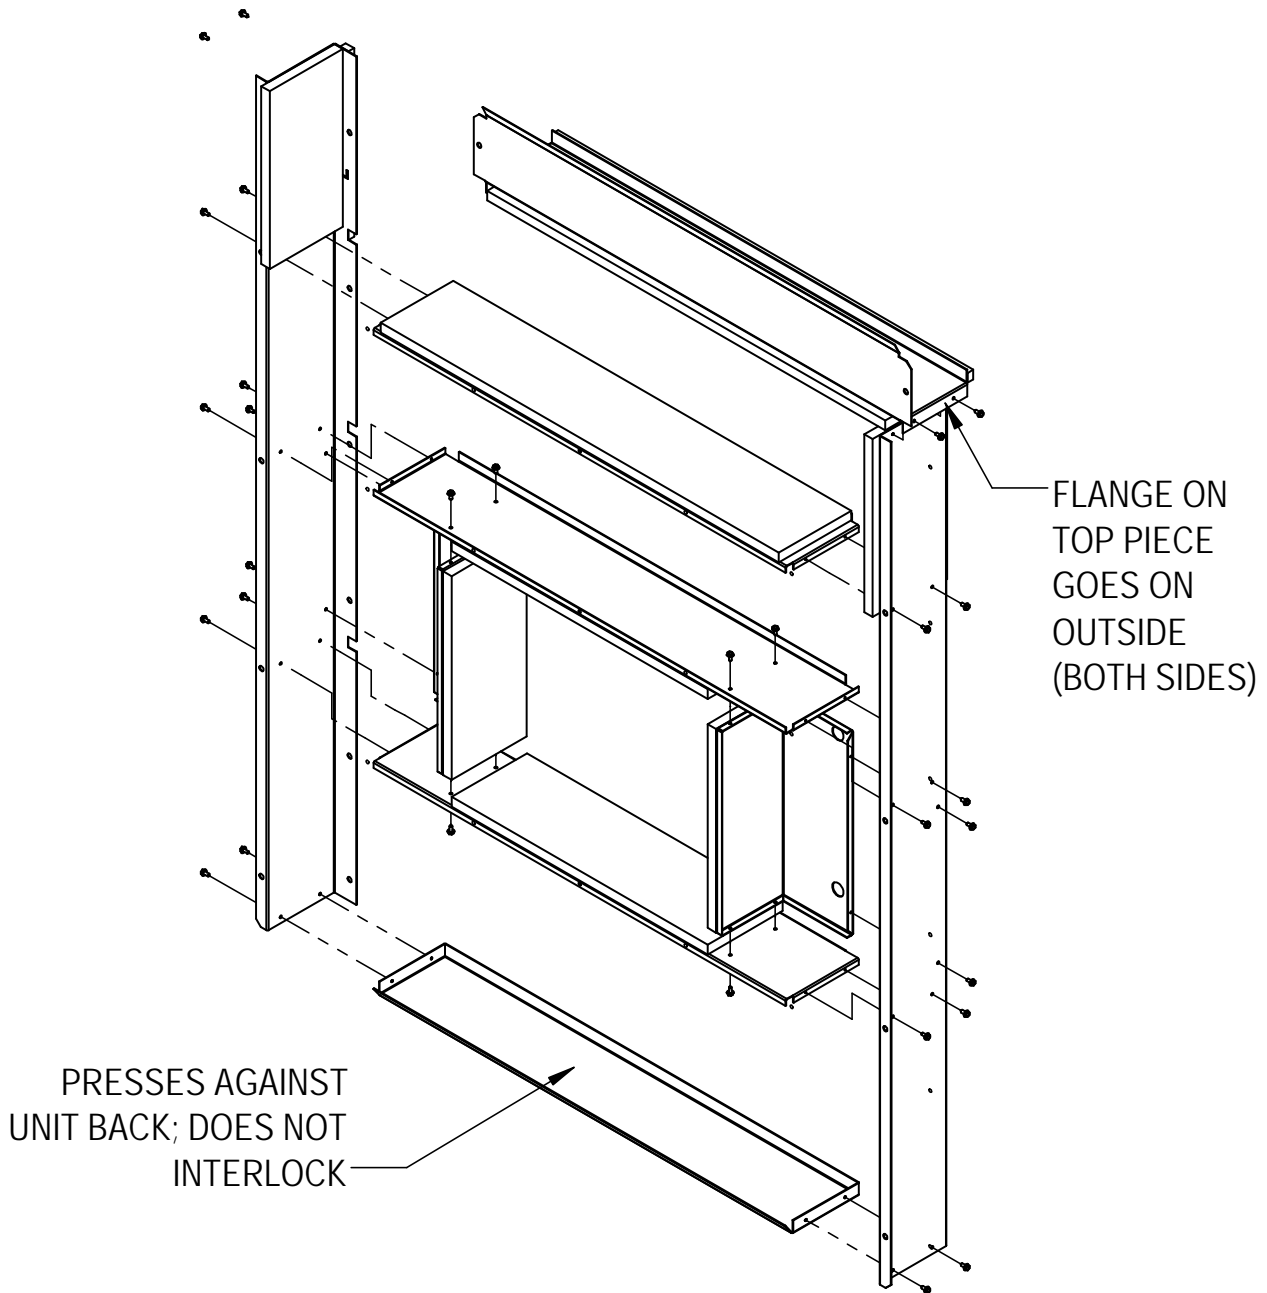

MIS-4469

Use screws supplied with kit to assembly wall curb

**FIGURE 2**  
**REWC53-\* Wall Curb**

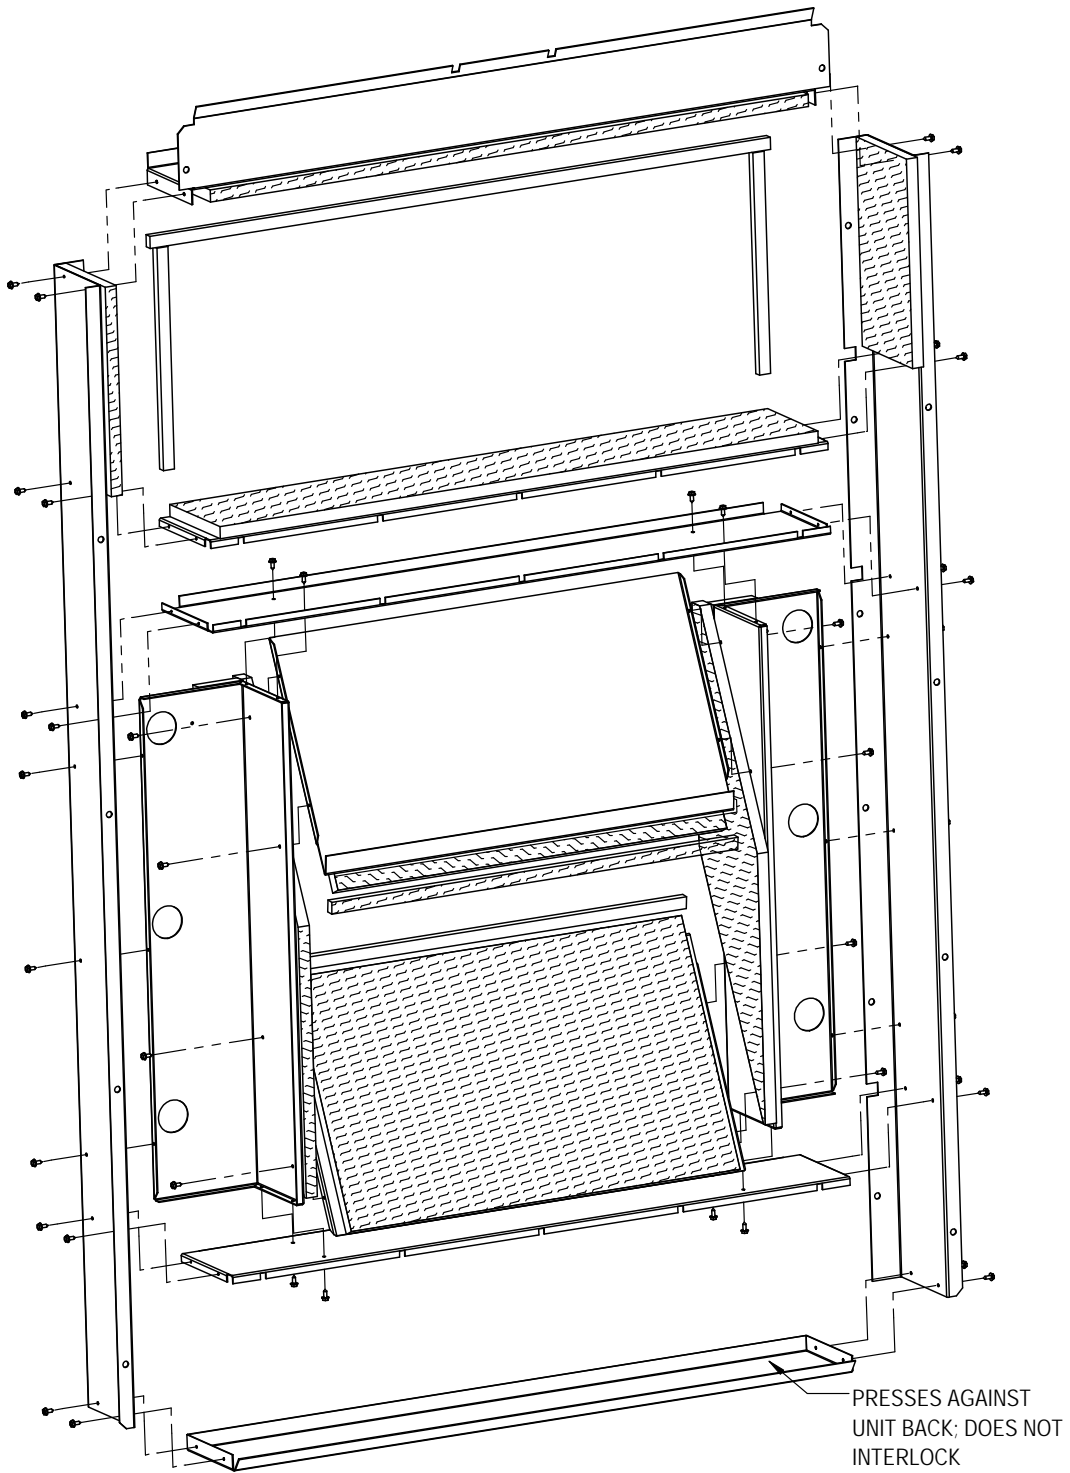


MIS-3917 A

Use screws supplied with kit to assembly wall curb

FIGURE 3


EXISTING 2 TON OPENINGS REFERENCE  
FOR SECURING CURB TO WALL

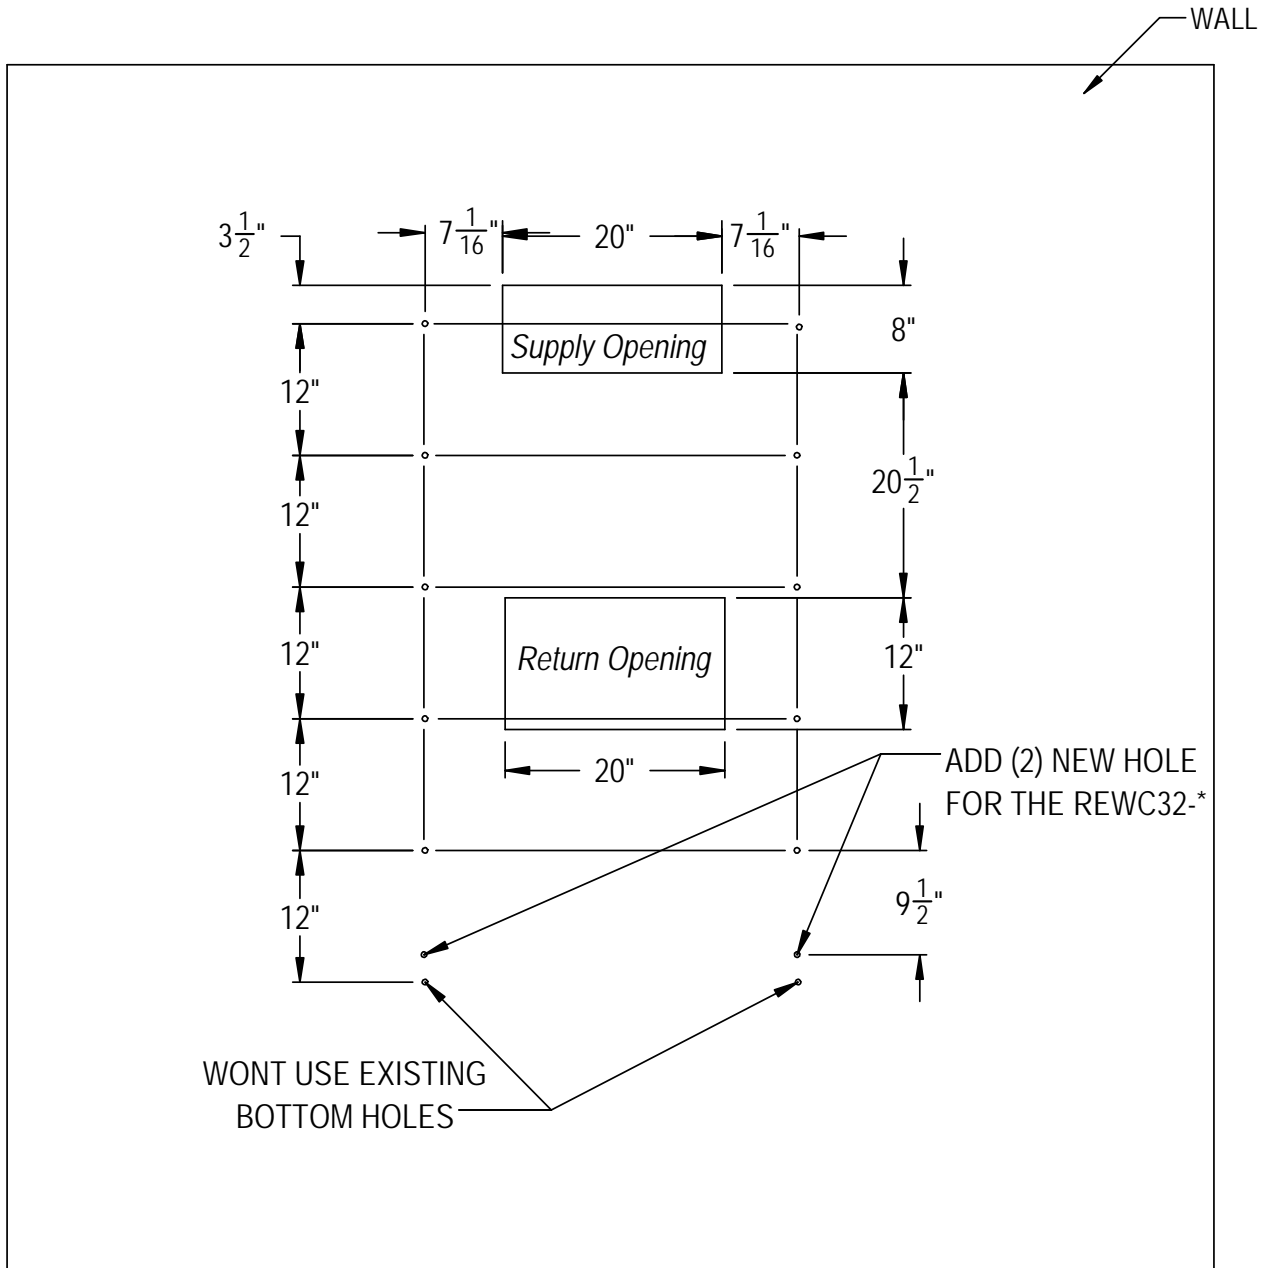

MIS-4467

FIGURE 4

EXISTING 3 TON OPENINGS REFERENCE  
FOR SECURING CURB TO WALL

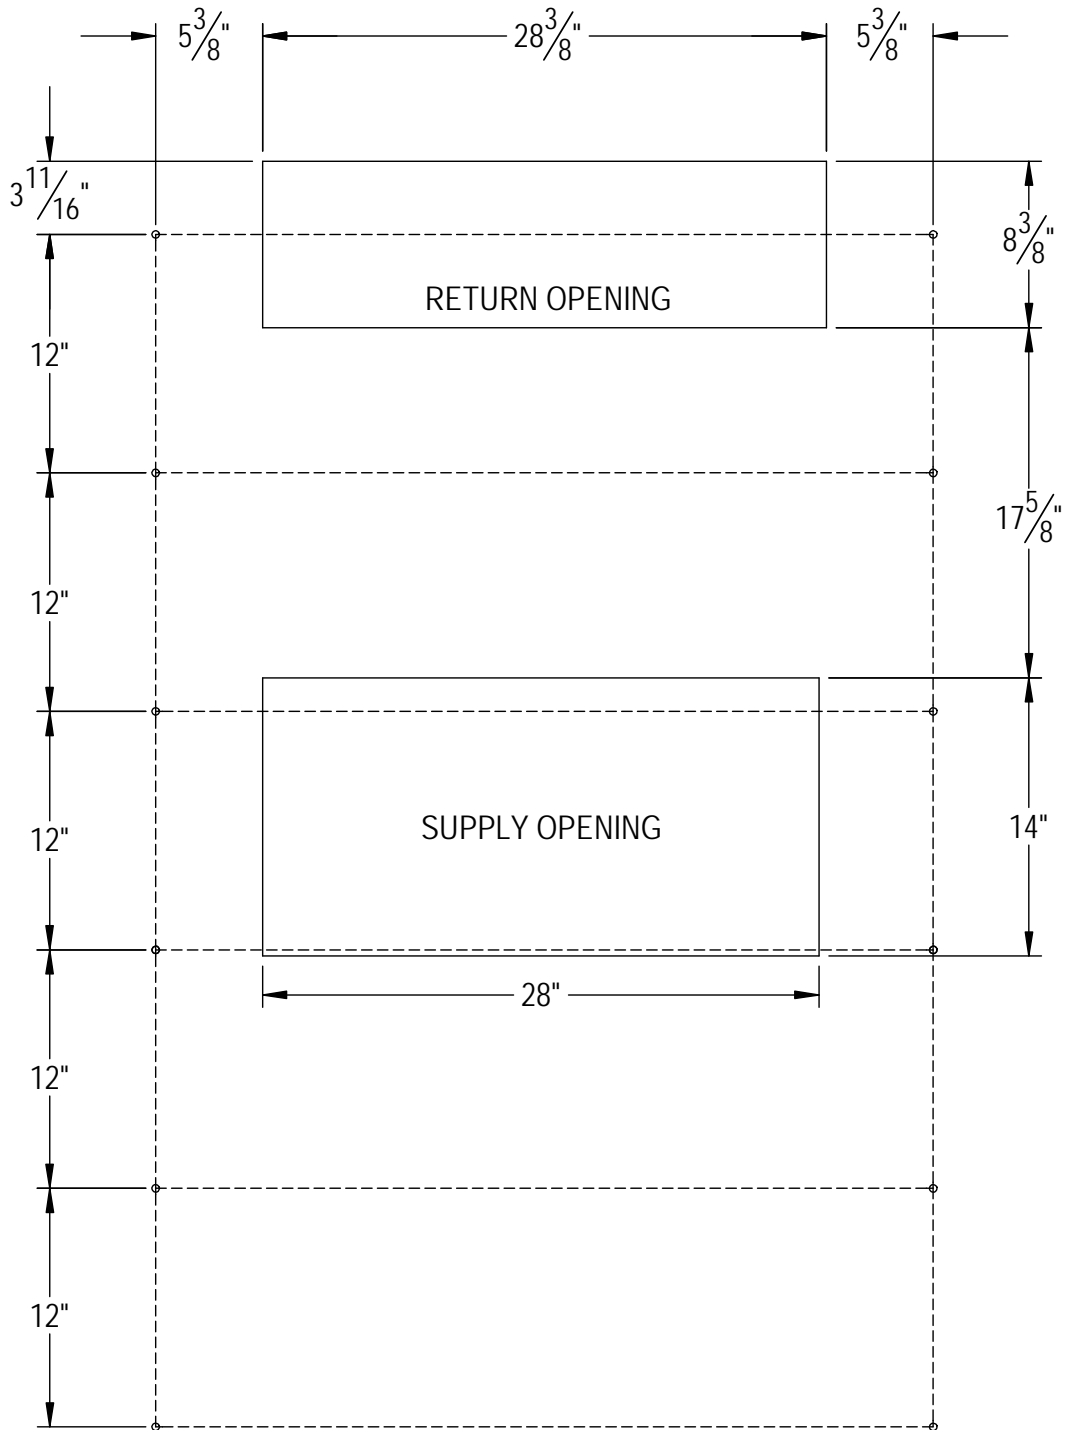

MIS-3918

FIGURE 5



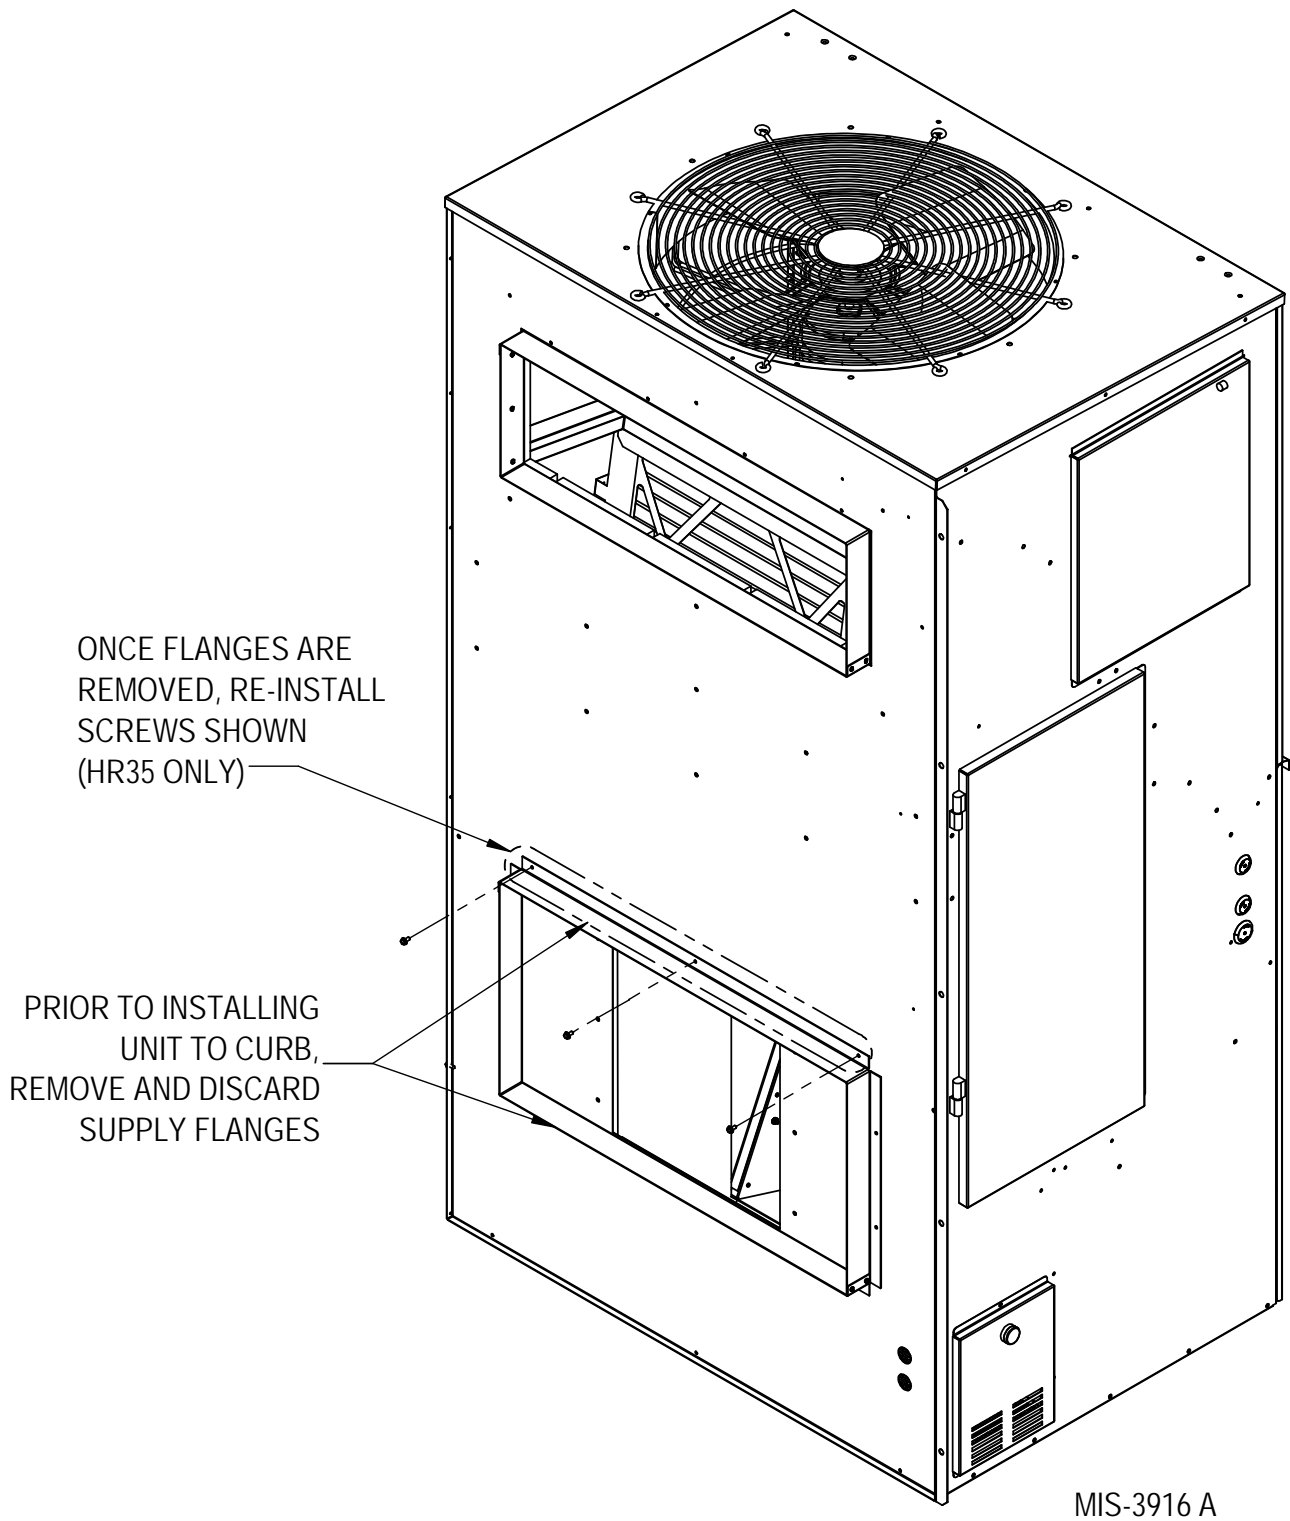


FIGURE 6

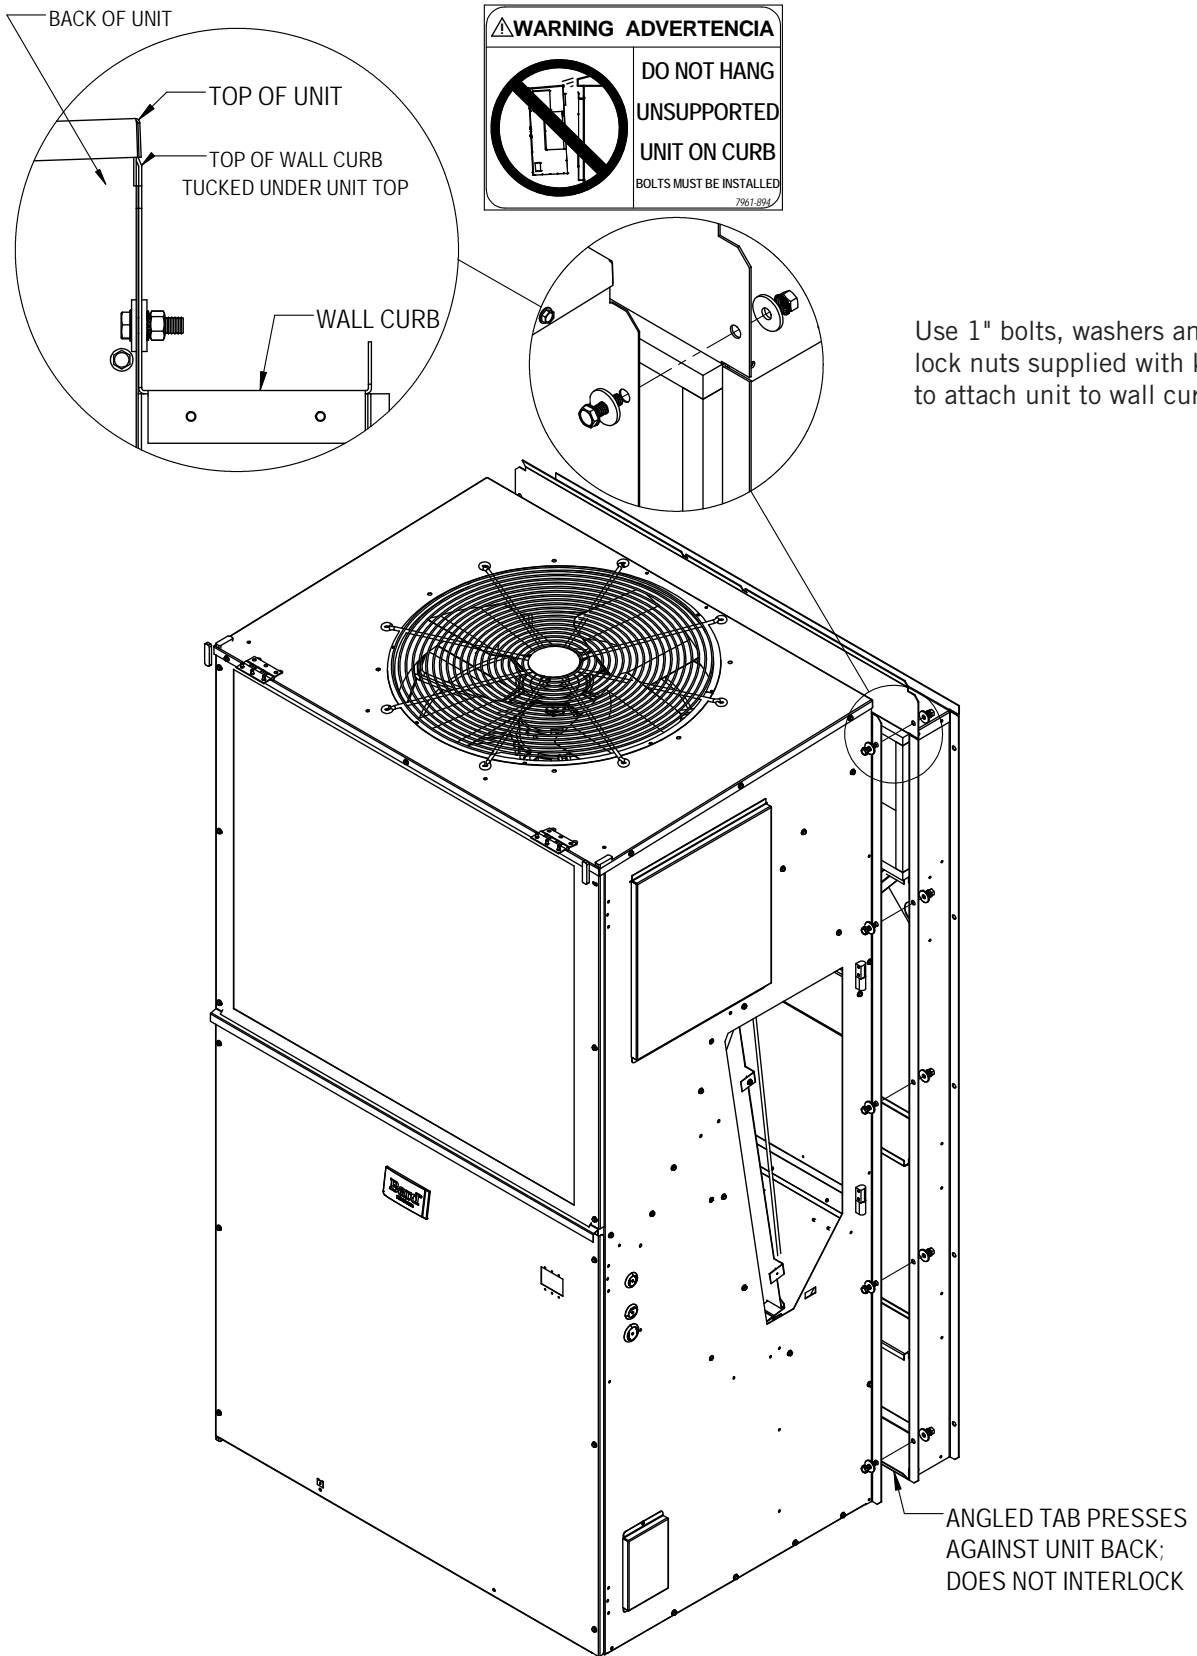

MIS-3908 A

FIGURE 7

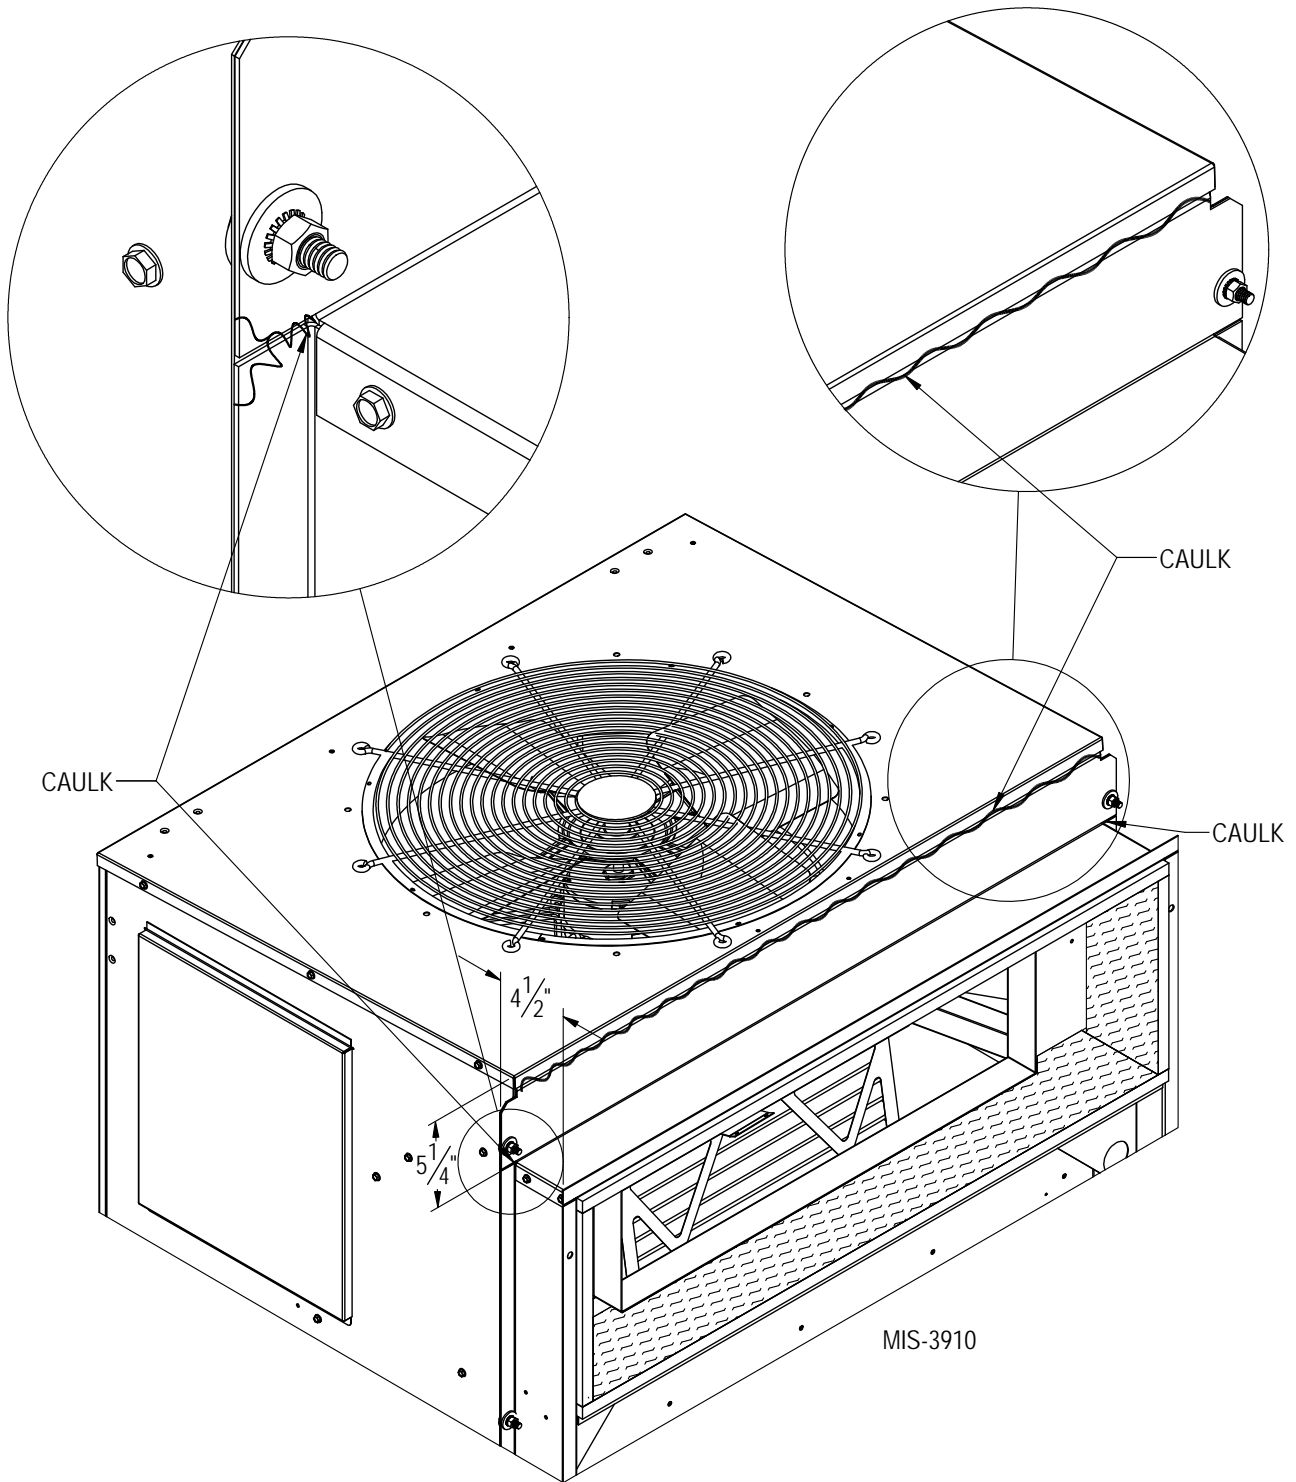



## Supply Air Grill Installation

Bard models SGR-2W (REWC32) and SGR-3W (REWC53) grilles are custom designed for utilization with Bard wall-mount unit HR\*\*AP\* for optimizing the air flow pattern and distribution to minimize recirculation issues, and optimizing airflow patterns within the shelter. They are engineered to ensure that the distributed air is forced in a downward and outward direction to eliminate obstructions and such from causing the distributed air from stratifying close to the unit and getting drawn back into the return air opening. With the optimized air pattern, the shelter should experience distributed air at the opposite end of the room.

To accomplish this, the grille has two special features:

1. The grille has a supply air fold-out diverter on the backside of the grille that directs the supply airflow in an outward pattern, thereby eliminating the potential for the obstruction of supply air if

**FIGURE 8**



equipment would be directly mounted in front of the unit. The rear deflectors must be folded out and secured by the installer with the supplied screws (see Figure 8).

2. The grille is also equipped with downward curved diverter blades to ensure a smooth and efficient means of directing the air pattern in a downward pattern, and away from being drawn back into the return air opening. The curved diverter blades are shipped in the flat position and need to be folded out to between 75-90° (best tuned to each individual structure). See Figures 9 and 10.

**FIGURE 9**



Diverter blades as shipped (left), and after raising (right)

**FIGURE 10**

**View of Installed Grille (as seen from above)**

